


# Swarovski Flat Backs No Hotfix

## Swarovski 2716 Rivoli Triangle

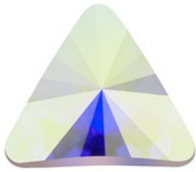

Méret  
MM 5,0

### Szín

- Crystal F (001)
- Crystal AB F (001 AB)
- Jet U (280)
- Jet Hematite U (280 HEM)